
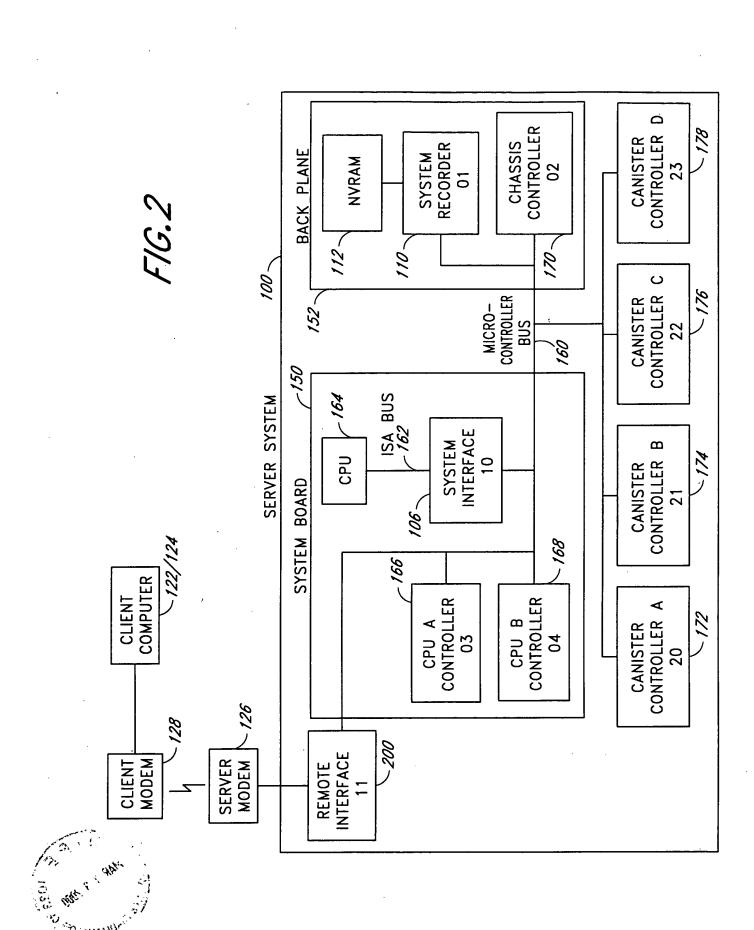


ANTO PARTY OF THE PARTY OF THE

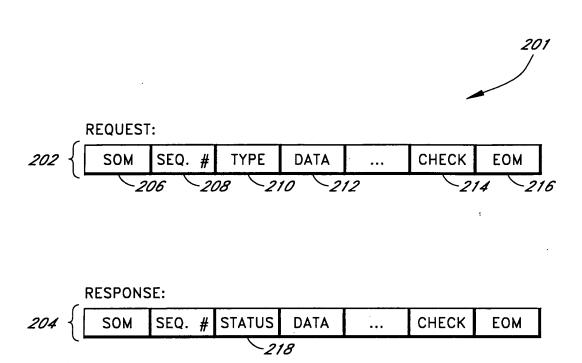

REMOTE INTERFACE SERIAL PROTOCOL MESSAGE FORMATS











FIG. 3

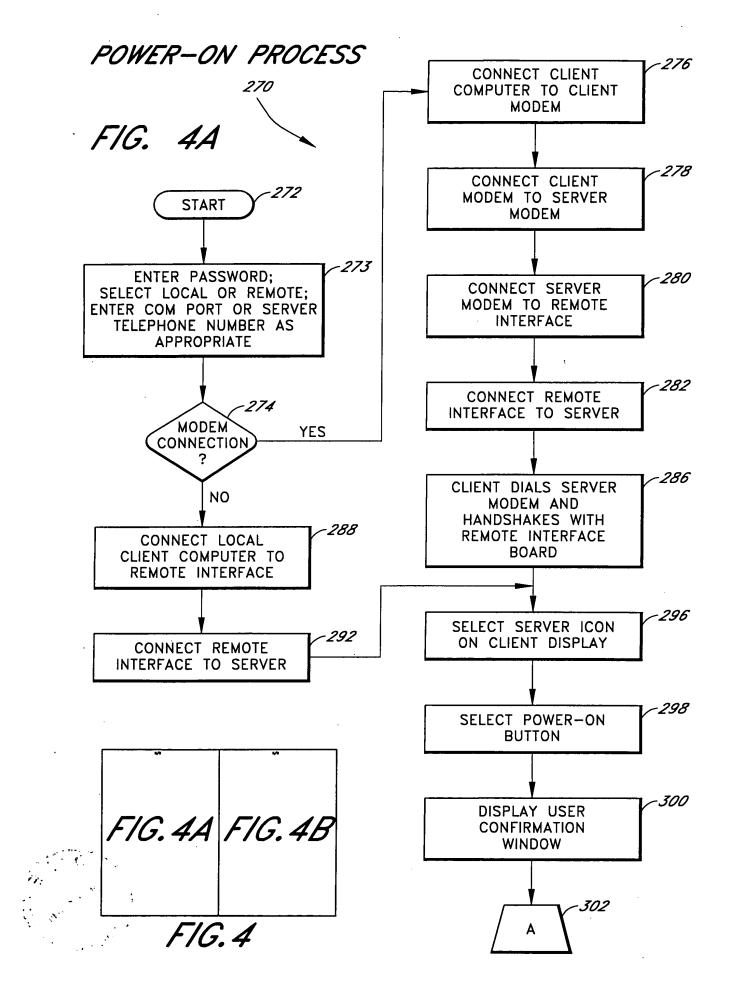

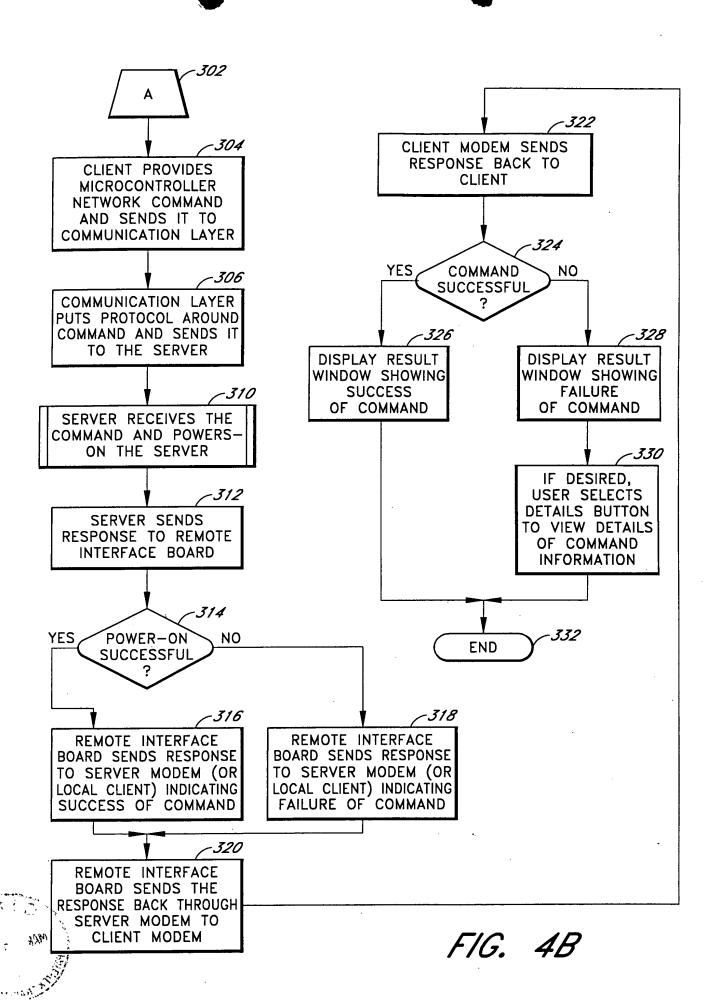


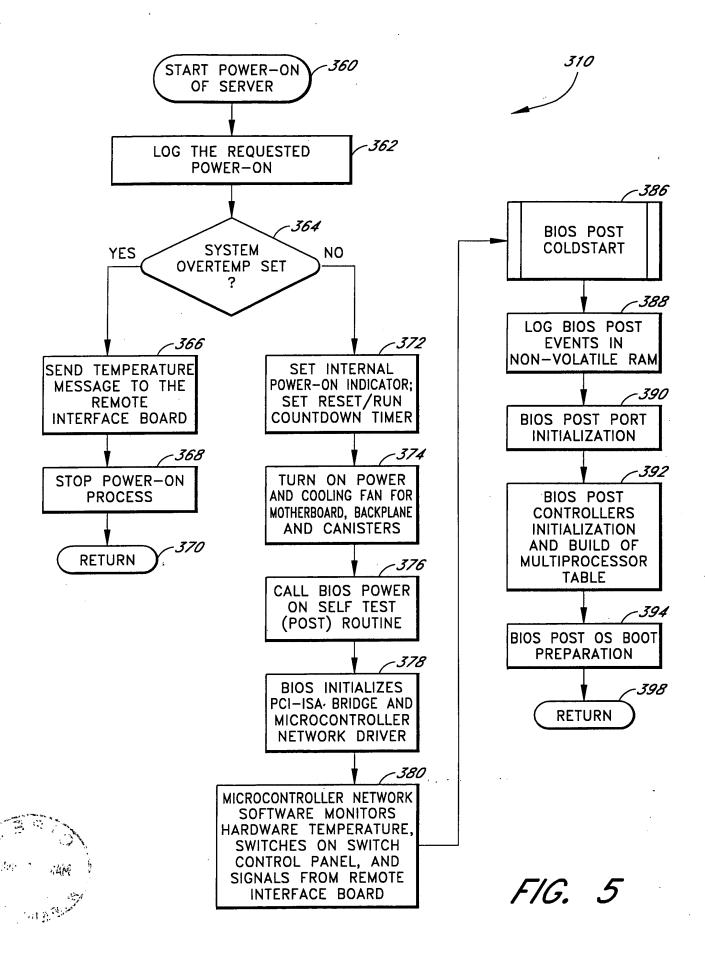


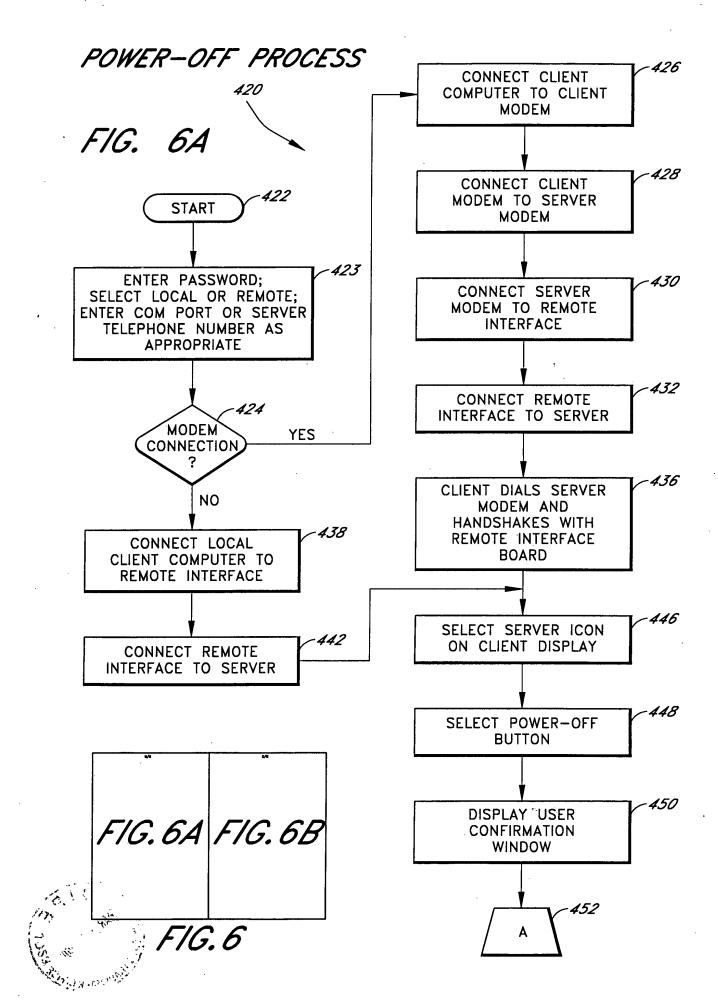


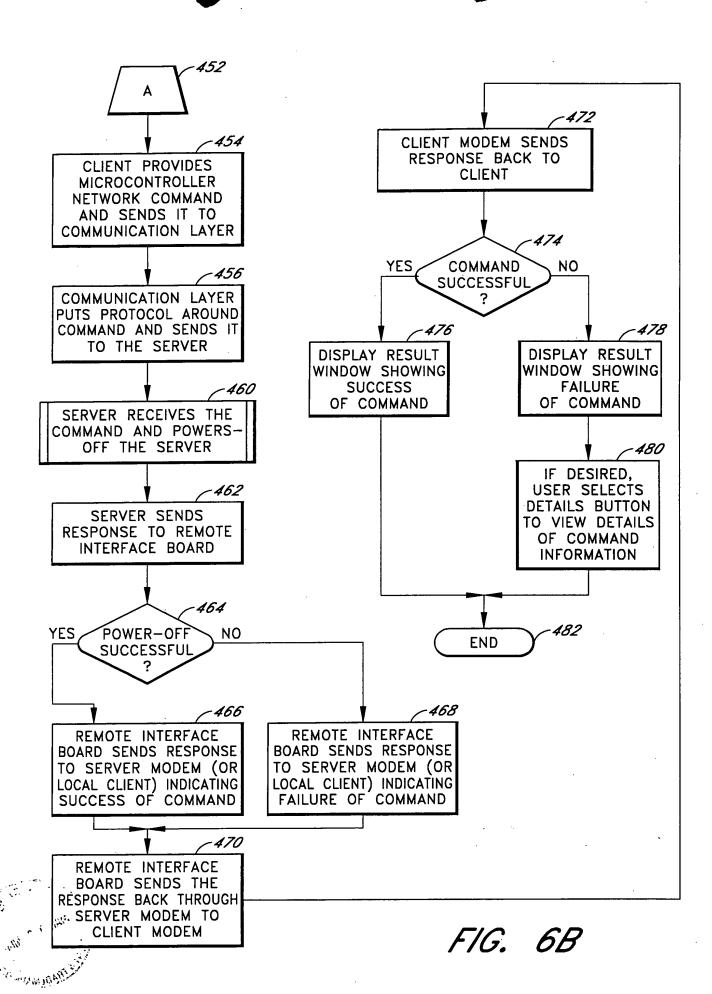




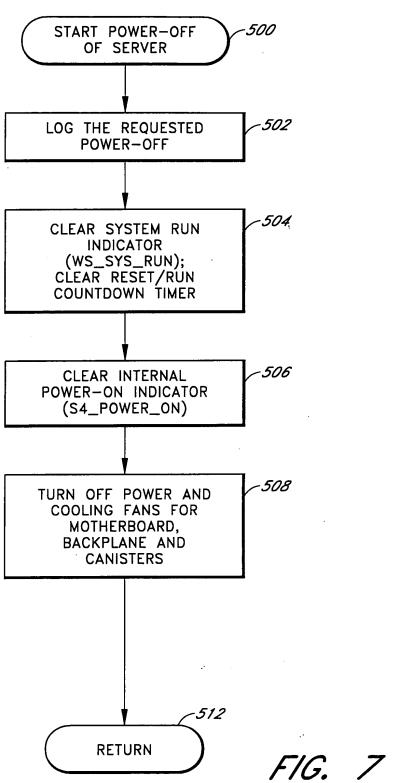


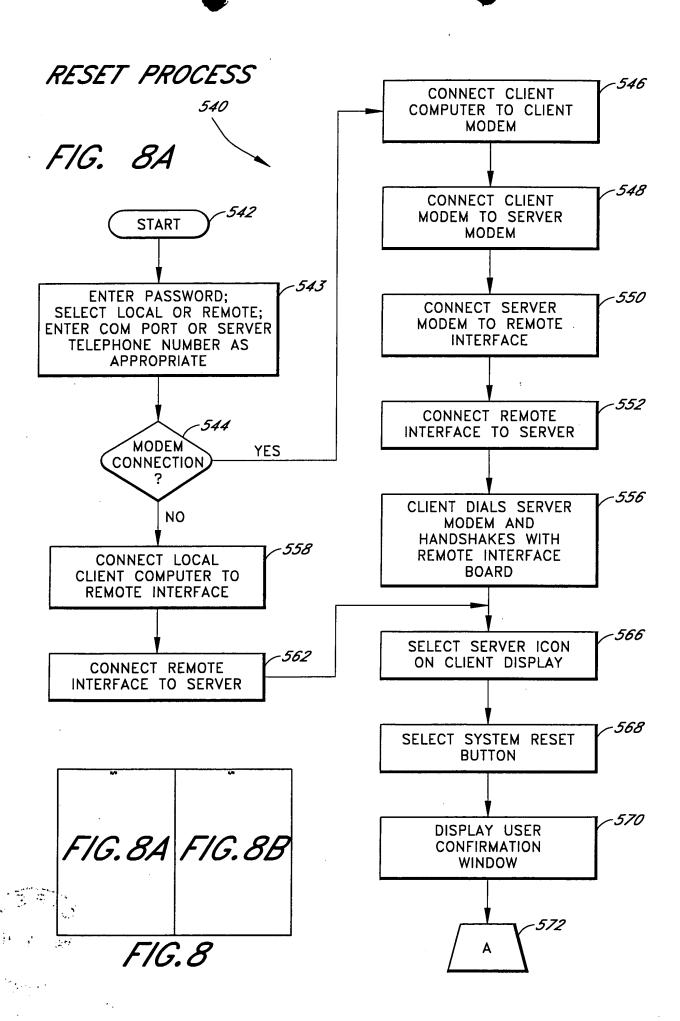


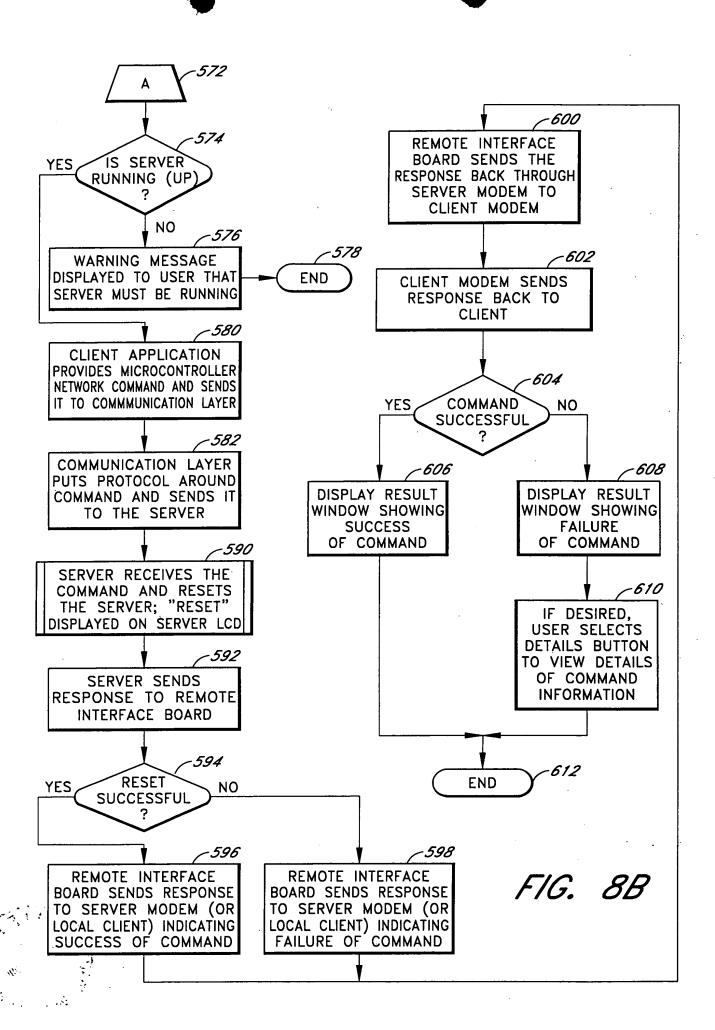

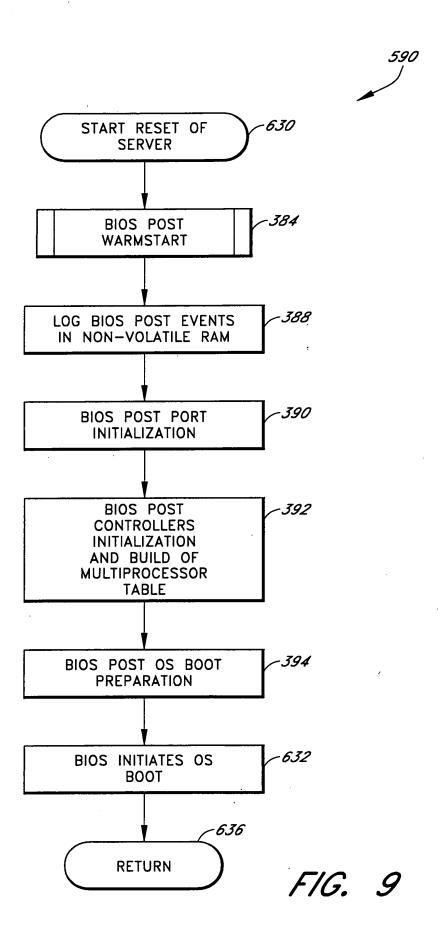

The Same of the same

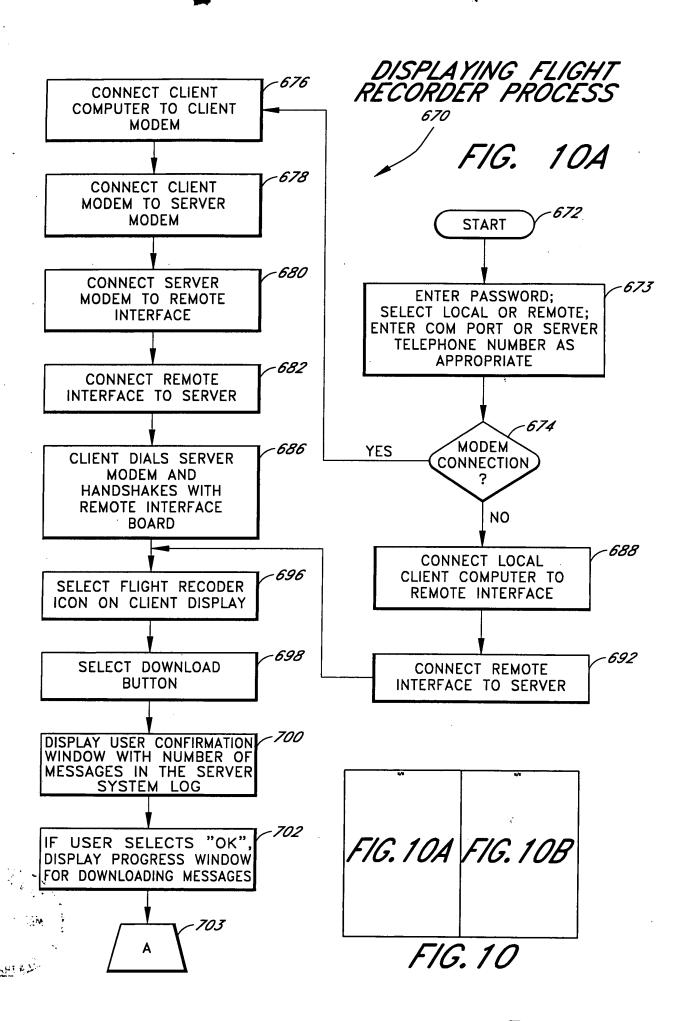

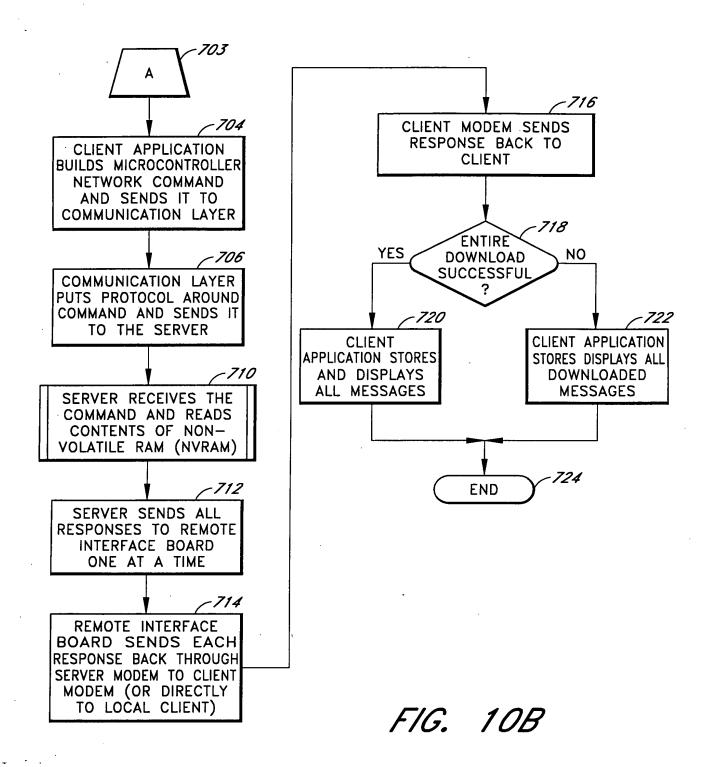



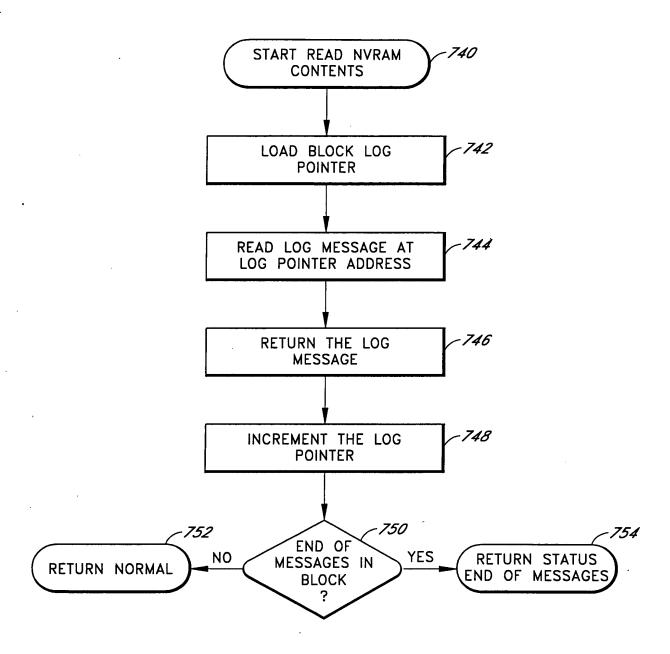
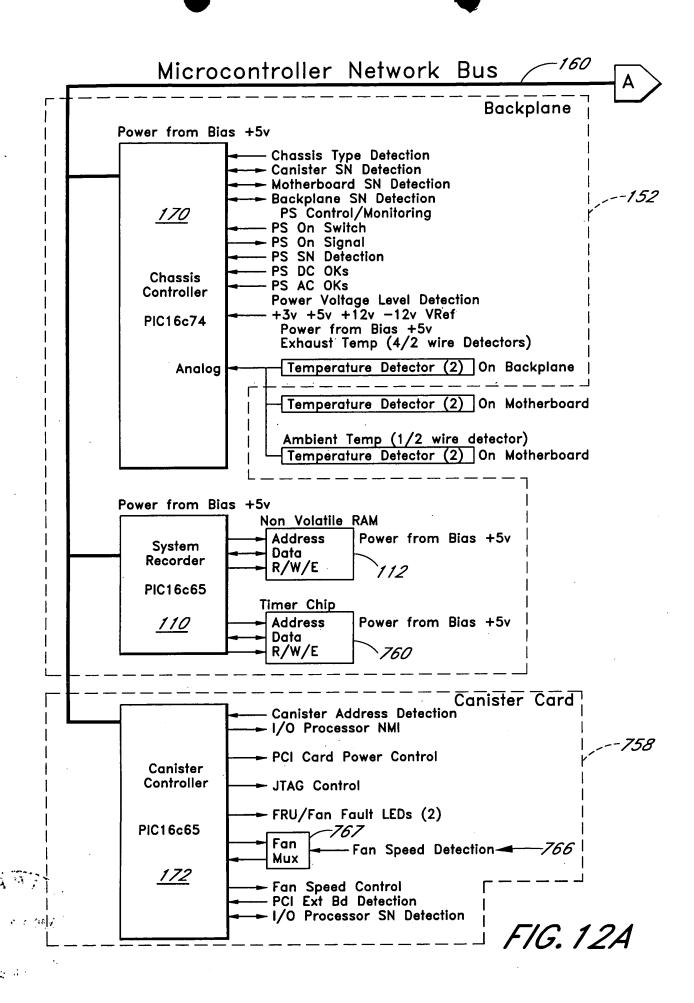
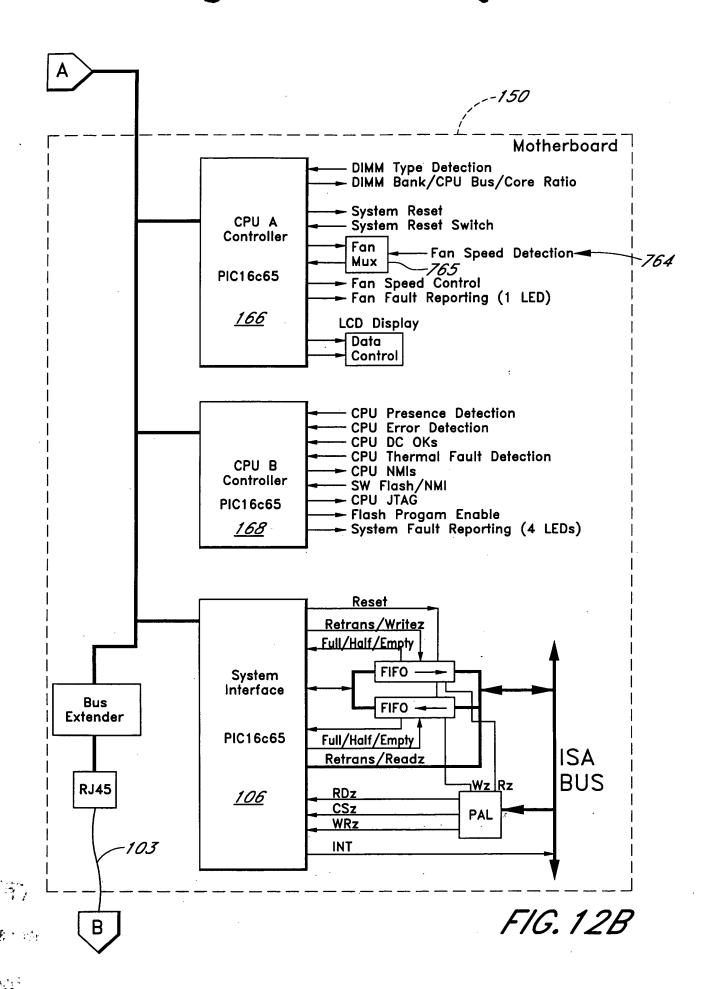


FIG. 11





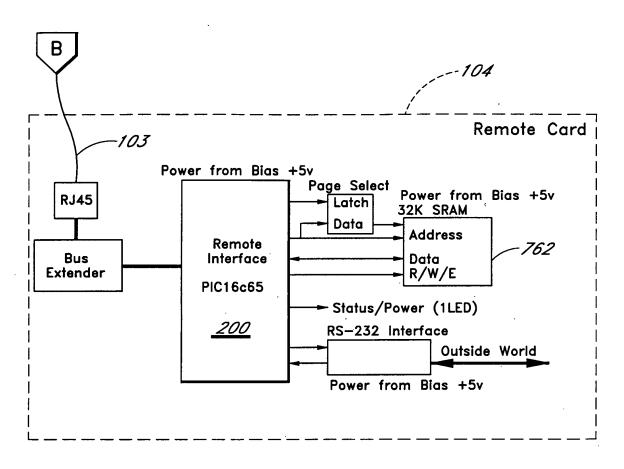
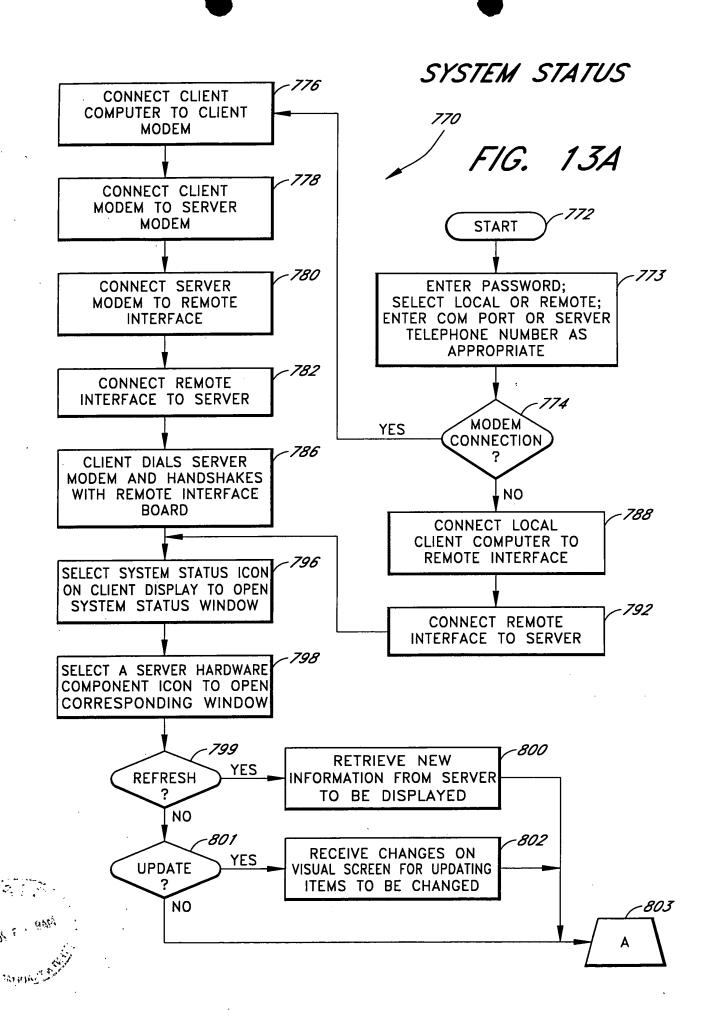


FIG. 12C



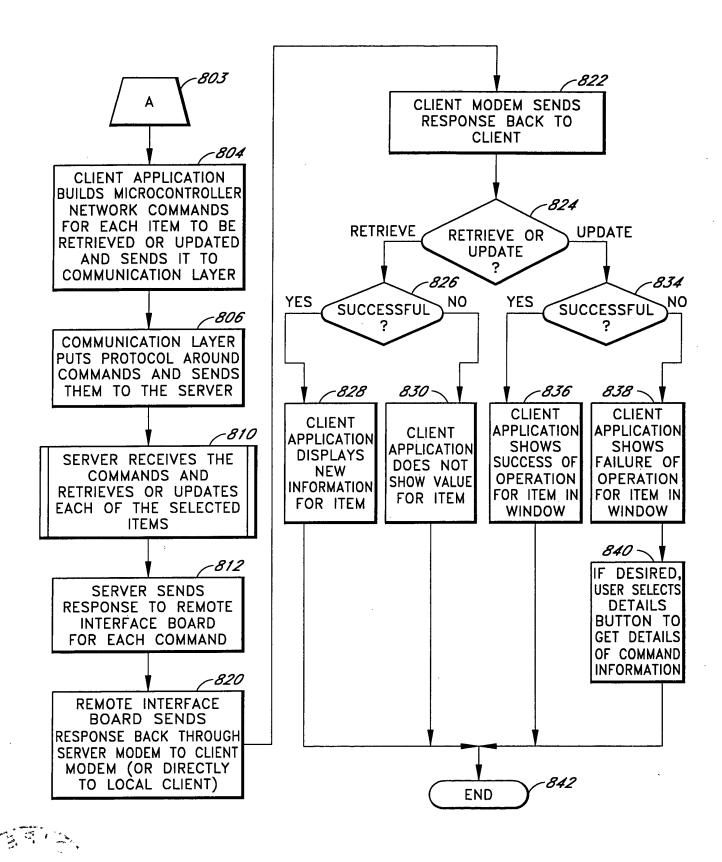


FIG. 13B

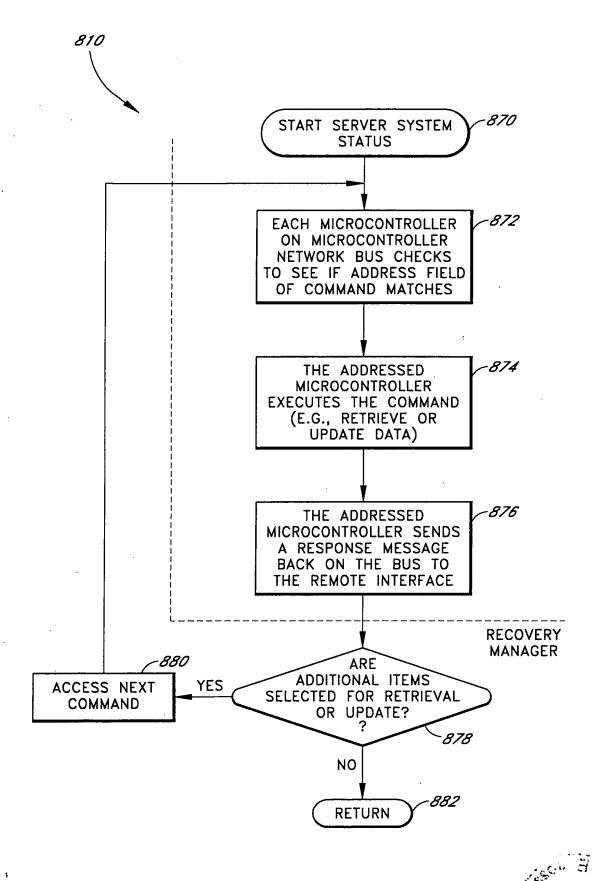


FIG. 14

FIG. 15

i

FIG. 16

FIG. 17

	·	985		186 986	886	686	066 686	166	
☐ Maestro Recovery Manager - Fans		\prod	\downarrow	\parallel		\downarrow			
Server View Help]
e—☐ NF 9000	Location	Fan	Speed Sp	eed Contro	Speed Control Fault Indicator LED	Fault	Low speed faul	fault threshold speed	l B
B System Status	System Board	-	4740 hi	high	NO	YES	4740		
- B Power Supplies) 	7	5160			YES			
Temperatures		٣	4260			YES			· · ·
		4	8520			YES			
System Board		2	9540			9			
		9	480			9			
9/6 Sanister B	Canister A	-	4740 hi	high	NO	9	4740		
3		2	5160			2			
	Canister B	-	4740 hi	high	NO	9	4740		
Canister D		7	5160			ou _.			
⊕ □ Processors	S Canister C	-	4740 hi	high	NO	9	4740		<u> </u>
—⊃∏⊃I/0 Canisters		2	5160			92			
— (stoop) Serial Numbers	& Canister D	-	4740 hi	high	NO	2	4740		
L Revisions		7	5160			o C			
☐ 🔀 Flight Recorder					3				T
Server	Refresh		Help						
096	766								
									$\overline{}$
For Help, press F1									W
			į	(

F1G. 18

FIG. 19